


# Masonry Arch Pinning of Debonded Bricks using Thor Drive Fix Ties

## Method Statement

1. Mark all loose bricks that require pinning.
2. Drill pilot holes to the required depth in each marked brick.
3. Install the Drive Fix Ties into the pre-drilled pilot holes using the Drive Fix Installation Tool and make good holes with a colour matched mortar.

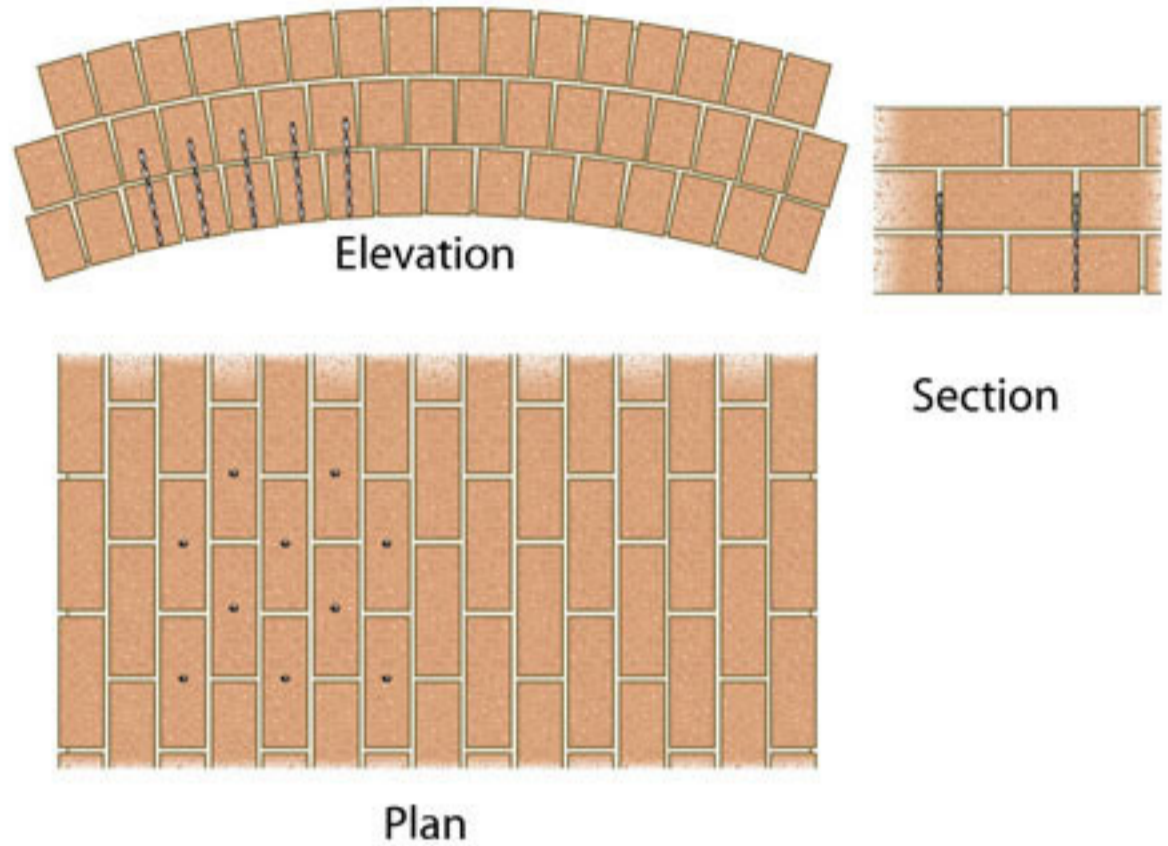

## SPECIFICATION NOTES

The following criteria are to be used unless specified otherwise:

- A. Ties to be long enough to allow a minimum of 70mm penetration into sound bricks.

## RECOMMENDED TOOLING

- A. 2.5kg SDS hammer drill
- B. Thor Drive Fix Tie installation tool and pilot drill of the correct diameter.

## General Notes

These notes are for general use only. Should these notes not apply to your specific project, please consult the Thor Helical Remedial Technical Support Team on 0870 6006164. Thor Helical Remedial are able to offer a full project design service by either our in house design team or our National network of Approved installers. In most instances this service is provided free of charge. Projects completed by our network of approved installers offer the benefit of a fully underwritten insurance backed guarantee.